



Aussie Camper Trailers & Outdoors

Cnr Milgate Dr & Sophie Crt Mornington Victoria 3931

## Aussie Outback Trekker Manual





## INITIAL SETUP

1. To open the camper trailer take the hook from the winch at the front of the trailer and connect it to the ring at the rear of the camper trailer on the lid.
2. Then wind out approximately 4 metres of cable from the rear winch. Connect the hook from the rear winch to the ring, also at the rear of the lid.
3. Then undo all clips and lift the rear of the camper trailer approximately 300-600mm.
4. Then go to the front winch and wind the lid up. Once it gets past half way the cable from rear winch will become taught. You can then go to the rear winch and unwind the cable. This in turn will let the lid down onto the front box of the camper trailer.
5. Once complete, go inside the camper trailer and extend all of the poles.
6. To close the camper trailer do the opposite of above, using the rear winch to wind the lid closed. Once the lid is approximately 300mm from the closed position, remove cable and place it in the roller below the winch. This will assist in closing the lid.
7. Before using your camper trailer you will need to connect the battery. The battery can be located under the seat on the right-hand side of the camper trailer. Connect the red wire to the positive terminal and the black wire to the negative terminal.
8. On the right-hand side of the camper trailer you will find the electrical control panel. The panel consists of an isolation switch, and switches for the lights and radio. When the camper trailer is not in use, make sure the isolation switch is turned off.
9. In order to charge the battery, make sure the isolation switch is closed. Then connect the Anderson plug located at the front of the drawer bar into a suitable 12 volt DC source.
10. In the fridge drawer you will find several keys. One will fit the door. One will be a master key to all of the locks and one will fit the water tank.
11. Also in the drawer you will find an allen key. This key will fit the cover on your wheel. It also fits the lifting mechanism for the luggage rack (if fitted).
12. Also in the drawer you will find a wheel brace. This is used for removing the wheel. It is also used for winding down the 'drop down jacks' which are fitted at both the front and rear of the camper trailer.
13. Also in the drawer you will find a shower head and shower hose. The hose fits to the shower connection at the front of the draw bar.



## MAINTENANCE & SERVICING

1. To maintain your warranty, your camper trailer should be serviced at a minimum of every 6 months by either returning it to Aussie Camper Trailers or having it serviced by a qualified repairer.
2. Every 6 months servicing should consist of changing wheel bearings and greasing all moving parts where applicable.
3. Every 12 months, brakes should be checked and adjusted. All hoses checked. Suspension checked.
4. Tyres should be checked on a regular basis. Tyre pressure should be 40psi.
5. Canvas should be aired after every use and never packed away whilst wet.
6. If tent is packed whilst still wet, it should be opened at the first available opportunity and aired until completely dry. Only then should it be packed up for storage.
7. After every use, the water tanks should be drained to avoid contamination.
8. When not in use, it is advisable to store your camper trailer under cover and avoid any direct sunlight for extended periods. This will help limit any fading and ultra-violet damage to your camper trailer.
9. It is advisable for a suitable sealing agent to be applied to your tent on an annual basis. These can be purchased from any reputable camping store.
10. Battery terminals should be checked on a regular basis for any corrosion or similar damage.
11. Should you have any queries, feel free to email us at [www.aussiecampertrailers.com.au](http://www.aussiecampertrailers.com.au) or phone us on 03 58976 3091